



Acer Aspire 5750-6667 Optical Drive Replacement

This guide will guide you through the process of removing your Acer Aspire 5750-6667 optical drive for replacement.

Written By: Chelsea Taylor



INTRODUCTION

The optical drive is where CDs and DVDs are inserted and read in a laptop. Optical drives have various moving parts so they can malfunction or stop working properly. The optical drive can be removed easily in order to replace it.




TOOLS:

- [Tweezers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



 Unplug the charging cable from the laptop and the wall. Failure to disconnect the charging cable could result in electric shock.

- Turn the laptop over.
- Locate the orange switch next to the battery.

Step 2



- Using a small tool such as tweezers or a pen, slide the orange switch completely to the left to unlock the battery.
- While holding the orange switch in place, lift the battery by the lip and pull it away from the laptop.

Step 3 — Optical Drive



- Locate the black screw just above the battery.
- Remove the black screw holding the optical drive in place by using a Phillips #0 screwdriver.

Step 4



- Pull the optical drive free from the laptop.

To reassemble your device, follow these instructions in reverse order.

